


Model: #FWA500

# Instructions for honeycomb holder

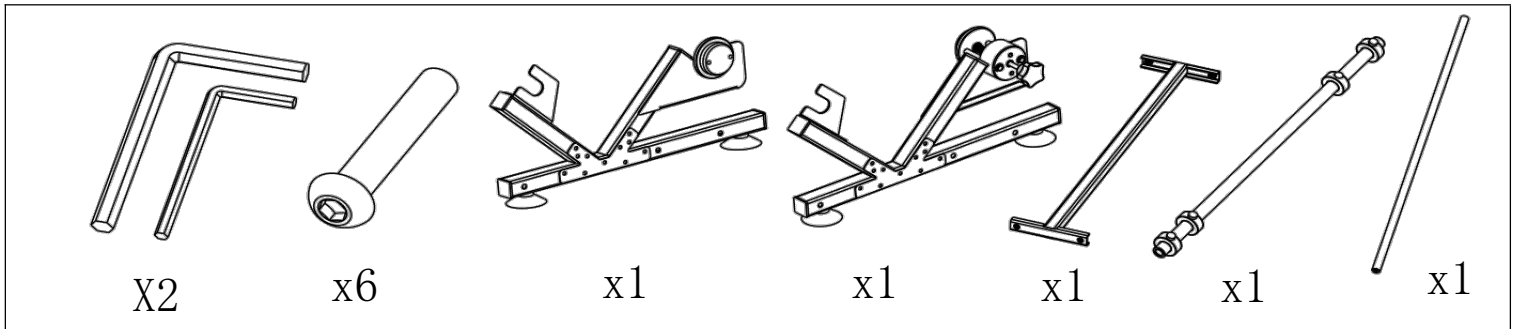

①

1. Install the supporting screws into the corresponding hole position;
2. Then lock the left and right sides with the horizontal gear components;

②

1. Lift the honeycomb roll paper and put one end of the tube core into the left square pass fixation bracket;
2. Then put the other end of the tube core into the right square bucket fixed bracket, there is a plum handle bolt on the right side, to adjust the tension according to the size of the roll, clockwise "tight", counterclockwise "loose" to adjust;

③

1. Put the snow pear paper support pole into the tube core, and then lock the blocking ring and secure the snow pear paper;
2. lift the support rod and put it into the support bracket inside;

④

1. When the honeycomb state fails to pull out for the first time, refer to the screw handle bolt on the right of Figure ②, adjust the tension in the clockwise direction, and stop the honeycomb state.

⑤

Weight of honeycomb paper holder: 4.75 Kg  
 Gross weight: 4 Kg  
 Outer size: 640x190x235mm (LxWxH (mm))  
 Honeycomb paper width: 500mm  
 Honeycomb paper diameter: 200mm

⑥

Appearance dimensions of honeycomb paper holder: