


FWC510 Honeycomb paper placement rack operation manual

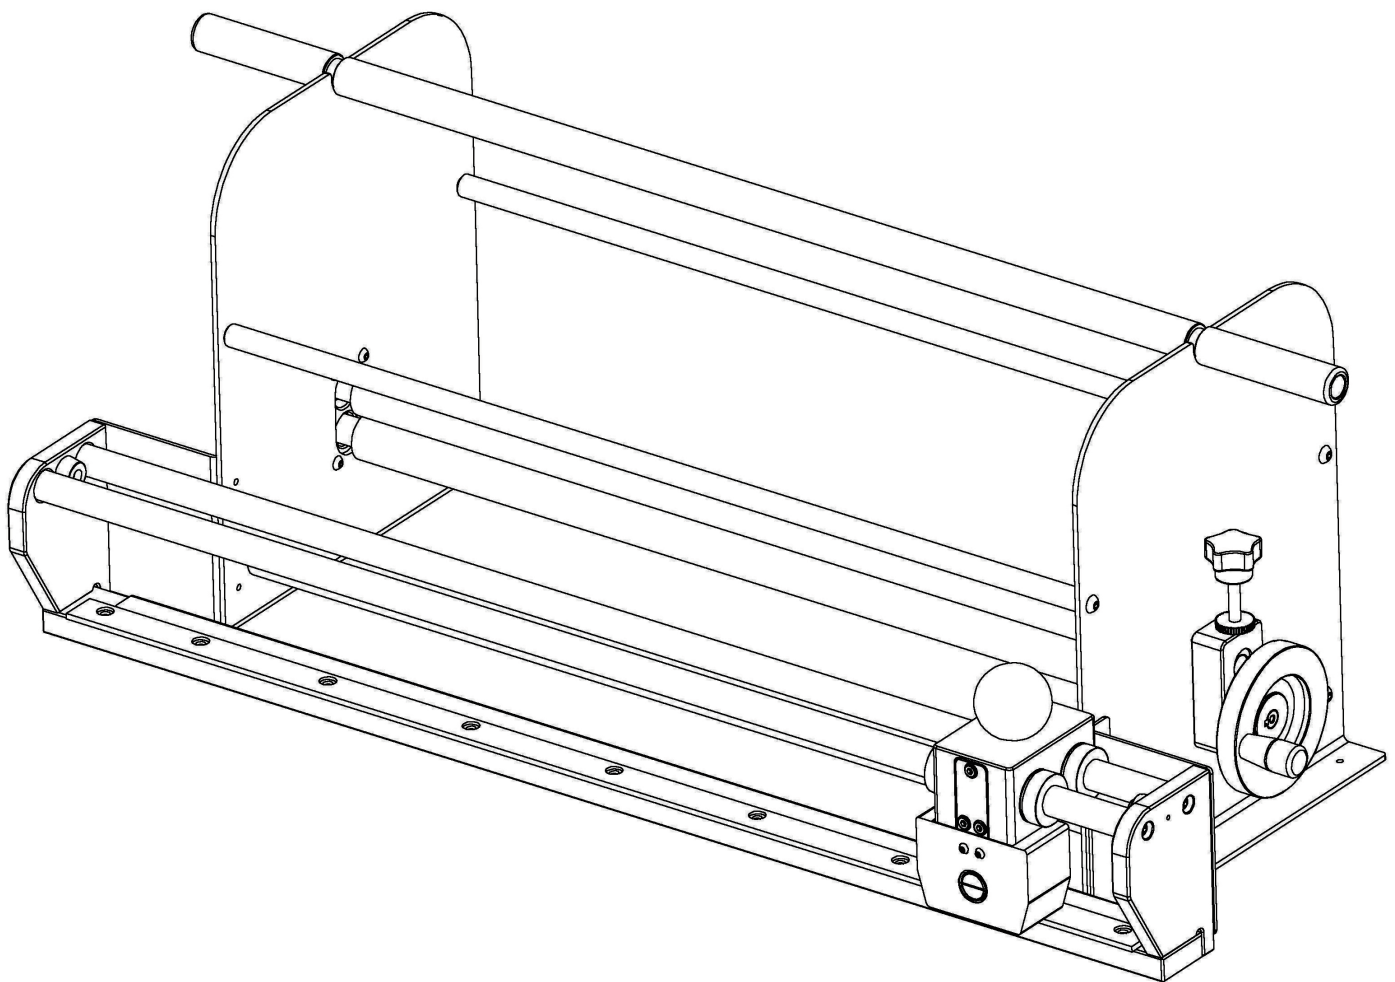

Before installing and using the product, please read the instruction manual carefully, and keep it properly and prepare for good use

1.0 About this operation manual

The purpose of writing this manual is to guide the operator to understand the location of each part of the system, and learn to operate, and eliminate the basic faults.

The contents of this manual only apply to FWC510 manual racks.

2.0 Safety instructions

1. Labor insurance items should be worn when working.
2. Only one person is allowed to operate alone. Children should not operate the machine
3. Only cut honeycomb paper or similar materials, do not cut hard materials or fragile items, so as not to damage the blade.

3.0 Product Introduction

1. Basic parameters

Size of paper cutter: 705MM * 285MM * 296MM (length * width * height)


Packaging size of paper cutter: 755MM * 340MM * 330MM (length * width * height)


Maximum honeycomb cell diameter:250mm

Maximum homeycomb paper length:510mm

Net weight: 13.3KG

Weight: 15 KG

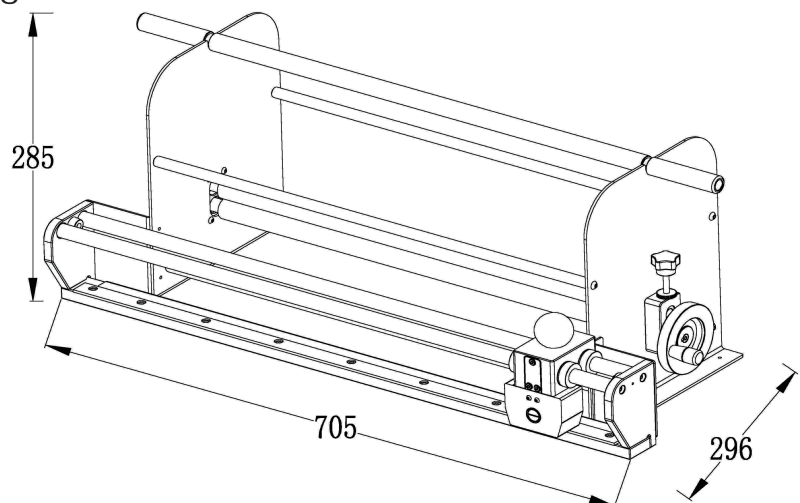


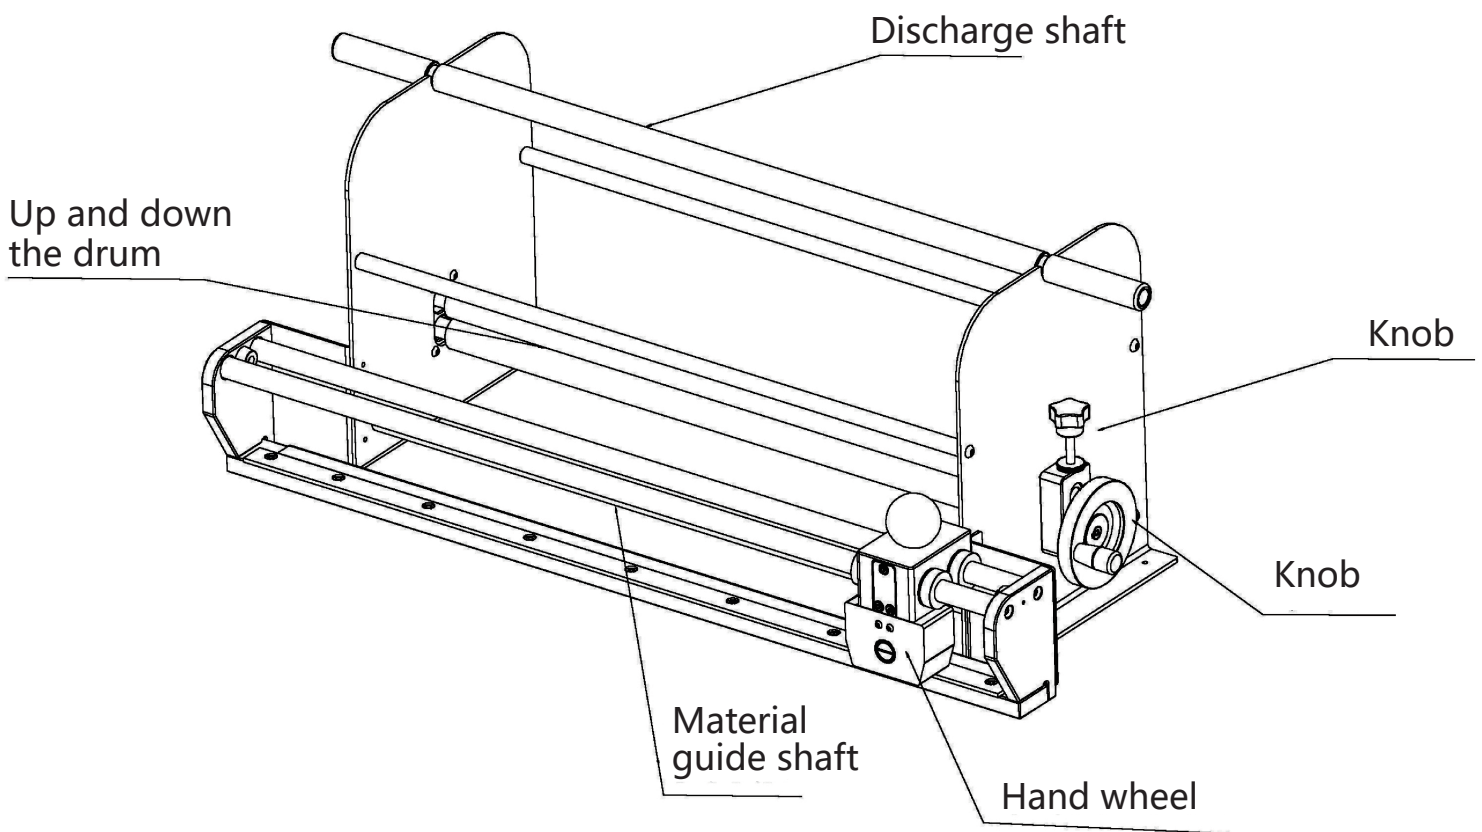

(Figure 1: Main components of the machine)


4.0 Operation instructions

1

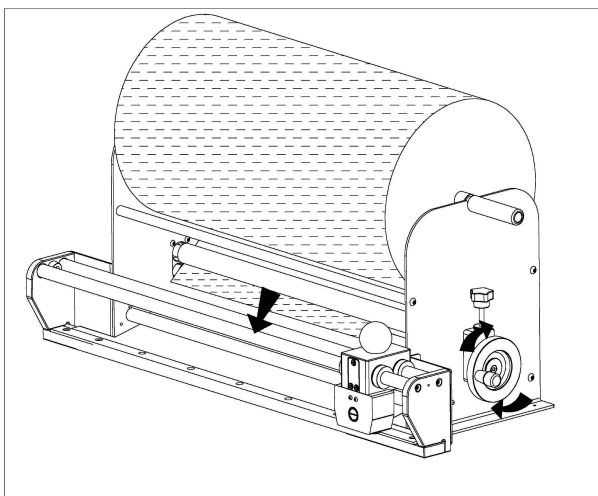


Turn the hand wheel to pull the honeycomb paper from the middle of the drum.

2

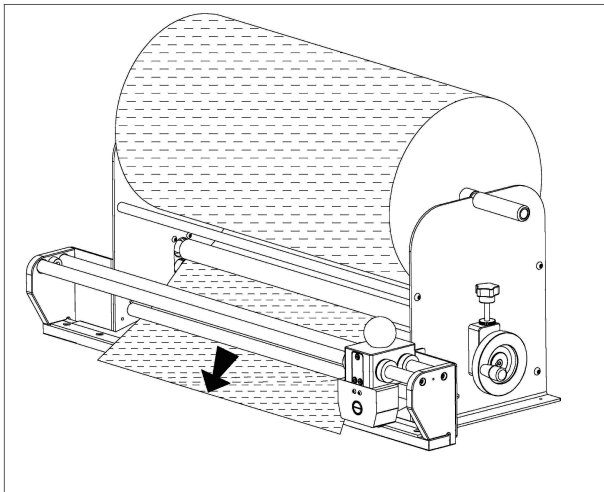


Extend the honeycomb paper from below the guide shaft.

3

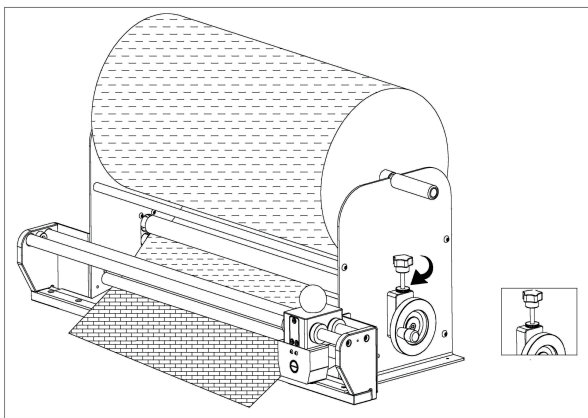

Adjust the knob to pull the honeycomb paper and tighten the nut to achieve the appropriate effect

4

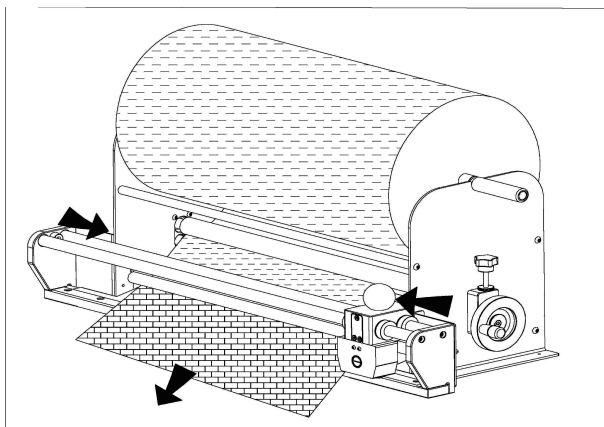

Start the work, pull out the honeycomb paper to wrap the items, one hand slightly pull the wrapped items to make the paper surface with tension, the other hand holds the handle ball to the left and right direction gently push.